

Mechanical Breakdown Coverage

### **North American Protection**

Xtended Auto covers your vehicle anywhere you go in Canada and the United States.

### Coverage That is Simple and Easy to Use

Full coverage with no hidden charges; all parts and labour included. Repair costs are paid directly to the repair facility, saving you out-of-pocket expenses and the inconvenience of waiting for reimbursement.

### **Transferable Coverage**

If you sell your vehicle, you can transfer your Xtended Auto coverage to the new owner, increasing the resale value of your vehicle.

#### **Toll-Free Assistance**

Should you need assistance with a claim or have questions about your Xtended Auto coverage, call the toll-free number for assistance.

# In British Columbia, Alberta and Saskatchewan:

Underwriter:
Trisura Guarantee Insurance
Company
Bay Adelaide Centre
333 Bay Street, Suite 1610, Box 22
Toronto, ON M5H 2R2
Phone: 416-214-2555

#### In all other provinces:

Fax: 416-214-9597

Insurer: Trisura Guarantee Insurance Company Administrator: CornerStone United, Ltd. 201-931 Commissioners Road E.

London ON N5Z 3H9 Phone: 866-481-1327 Fax: 866-481-1327

Obligor and Administrator: CornerStone United, Ltd.

Protect your investment
Protect your family
Travel with confidence
The Xtended Auto Advantage



### **HYDRAULIC SUSPENSION**

Provides coverage for all of the manufacturer installed mechanical, electrical and hydraulic components of the hydraulic suspension system. Some exclusions apply.

### ENHANCED SEALS & GASKETS (included in Ultimate)

Seals and gaskets for all covered components are covered independently or in conjunction with a covered repair

### AIR BLADDER SUSPENSION

Coverage is provided for all of the manufacturer installed mechanical, electrical and pneumatic components of the air suspension system. Some exclusions apply.

### Battery Assistance

Reimbursement for meals and lodging in the event of a covered mechanical breakdown more than 100 km from home.

TRIP INTERRUPTION EXPENSE

Fuel, Oil, Fluid and Water Delivery Service

**Towing Assistance** 

Flat Tire Assistance

**Lock-Out Assistance** 

### WHY XTENDED AUTO?

Since 1996 Xtended has been serving Canadian Dealers and their customers.

Our programs are Canadian owned and fully underwritten by Trisura Guarantee Insurance
Company, an A rated Canadian Insurer. We provide drivers with worry free coverage
anywhere they travel throughout North America. One call will get you the support you need.
For more information visit our website: www.vprotectcdn.com





# Coverage options available to meet your needs

COVERED COMPONENTS	XO-1	XO-2	OBILIMALE
ENGINE			
All Internally Lubricated Engine Parts Air Filter Housing		•	
Camshaft			
Camshaft Bearings			
Connecting Rod Bearings			
Connecting Rods		•	
Crankshaft		٠	
Distributor Shaft and Housing	•	٠	
Engine Block and Heads	٠	٠	
Harmonic Balancer	•	٠	
Intake and Exhaust Manifold	•	٠	
Intake and Exhaust Valves	•	•	
Lifters Main Bearings	•	•	
Main Bearings Mounts			
Oil Pan			
Oil Pump and Oil Pump Housing			
Piston Rings & Piston Pins		ı.	
Pistons			
Push Rods			
Rocker Arm Shafts			
Rocker Arms		•	
Tensioners / Guides		•	
Thermostatically Controlled Air Intake		•	
Timing Chain or Belt	•	٠	
Timing Gear Cover	•	٠	
Timing Gears	٠	٠	
Valve Covers & Valve Guides	•	٠	
Valve Springs	•	٠	
Valve Train	•	٠	
Water Pump TRANSMISSION:		•	
All Internal Parts			
Band Apply Servo			
Bands			
Bearings			
Bushings		•	
Centre Support		٠	
Check Balls		٠	
Clutch Apply Piston	٠	٠	
Clutches	•	٠	
Collars and Springs	•	٠	
Counter Shaft	•	•	
Detent Balls	•	•	
L leave on a	•	•	
Drums			
Dual-Clutch Assembly	•	•	
Dual-Clutch Assembly Front Pump	•		
Dual-Clutch Assembly Front Pump Gears	•	•	
Dual-Clutch Assembly Front Pump Gears Governor Assembly	•	•	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts			
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings	•	• • • •	
Dual-Clutch Assembly Front Pump	•		
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts	•		
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set	•	• • • • • •	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts		• • • • • • •	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings	•		
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings Roller Clutches	•	• • • • • • • • •	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings Roller Clutches Shafts	•	• • • • • • • • • •	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings Roller Clutches Shafts Shift Forks	•	• • • • • • • • • • • • • • • • • • • •	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings Roller Clutches Shafts Shift Forks Stator and Stator Shaft		• • • • • • • • • • • • • • • • • • • •	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings Roller Clutches Shafts Shift Forks Stator and Stator Shaft Synchronizer Sleeves Synchronizers Thrust Washers		• • • • • • • • • • • • • • • • • • • •	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings Roller Clutches Shafts Shift Forks Stator and Stator Shaft Synchronizer Sleeves Synchronizers Thrust Washers Torque Converter		• • • • • • • • • • • • • • • • • • • •	
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings Roller Clutches Shafts Shift Forks Stator and Stator Shaft Synchronizer Sleeves Synchronizers Thrust Washers Torque Converter Transmission Pan and Case			
Dual-Clutch Assembly Front Pump Gears Governor Assembly Input and Output Shafts Internal Sealing Rings Levers Mounts Planetary Gear Set Pressure Regulator Valve and Bearings Roller Clutches Shafts Shift Forks Stator and Stator Shaft Synchronizer Sleeves Synchronizers Thrust Washers Torque Converter			

	÷		_
COVERED COMPONENTS	X0-1	X0-2	ULTIMATE
HYBRID / ELECTRIC VEHICLE:			H
Battery Sensors			
Cooling Duct			
Cooling Fan			•
Drive Battery Pack			•
Electric Drive Motor	٠		٠
High Voltage Harness and Junction Box	٠		٠
Hybrid Control Unit	۰		٠
Inverter Stator and Rotor			•
TURBO / SUPERCHARGER:			
All Internal Parts		•	•
Housing	٠		•
TRANSFER UNIT:			
All Internal Parts	٠		٠
Case	•	•	٠
DRIVE AXLE: All Internal Parts			
Axle Shafts	ш		
CV / Tripod Joints			
Differential Case			•
Drive Shaft Carrier	٠		•
Drive Shaft Yokes	٠		٠
Drive Shafts	٠		٠
Front Hubs	٠		٠
Locking Hubs	•		٠
Propeller Shafts U Joints			
STEERING			
All Internal Parts in Rack and Pinion	٠	•	٠
Power Steering Cooler	٠		•
Power Steering Pump	٠		٠
Steering Box	•	•	٠
ELECTRICAL Alternator		-	
Front and Rear Wiper Motor			•
Front and Rear Wiper Motor Circuit Board			
Starter Assembly			•
Starter Motor	٠		•
Starter Relay	٠		٠
Switches for Power Windows	٠		٠
Voltage Regulator	٠		٠
Electronic Ignition Module Antenna Motor			•
Cruise Control Servo			•
Distributor			
Door Lock Actuators			•
Electronic Digital Instrument Cluster			•
Heater Blower Motor			٠
Module and Transducer			٠
Trunk Actuator			٠
Washer Pump Relay and Delay Switch		•	٠
BRAKES Accumulator			
Anti-Lock Brakes Electronic Control Unit			
Calipers			
Combination Valve			•
Hydraulic Pump / Motor Assembly	•		٠
Isolation Dump Valve	•		٠
Master Cylinder	•		٠
Pressure Modulator Valve	•		٠
Wheel Cylinders Wheel Speed Sensors / Excitors	•		•
Wheel Speed Sensors / Exciters Clips and Retainers			
Power Assist Booster and Valve			
Steel Lines and Fittings			
U			

COVERED COMPONENTS	ХО-1	XO-2	BILLYWITIGIO
AIR CONDITIONING:	_		
Accumulator	•	•	٠
Compressor	٠		•
Condenser	•		٠
Receiver Dryer	٠		•
Clutch			•
Evaporator			•
Expansion Valve			٠
Orifice Tube			٠
COOLING:			
Engine Cooling Fan Motors	٠		٠
Radiator Fan	٠		٠
Water Pump	٠		٠
Radiator			٠
Temperature Sensors			٠
SUSPENSION:			
Coil and Leaf Springs			٠
Control Arm Shafts and Bushings			٠
Spindles and Spindle Supports			٠
Upper and Lower Ball Joints			•
Upper and Lower Control Arms			•
ELECTRONICS:			
Calibration Prom		•	٠
Control Module for TPMS			٠
Crankshaft Position Sensor			٠
EFI Sensors			٠
Electronic Engine Control Module			•
Electronic Spark Control Module			•
Engine Control Module			•
Front Rear and Side View Camera			
Front Rear and Side View Display Monitor			•
Idle Air Control Valve			•
Manifold Air Pressure Sensor			
Mass Air Flow Sensor			
Oxygen Sensor			
Powertrain Control Module			
Sensors and Initiators for TPMS			
Throttle Position Sensor			
Transmission Control Module			
FUEL DELIVERY:	_		
Fuel Pump		•	
Injection Pump			
Metal Fuel Lines			
Throttle Body Assembly			
Vacuum Pump			
SEALS AND GASKETS:	_		
In Conjunction with a Covered Repair		•	
ADDITIONAL COVERAGE	_	_	
Air Door Motors	•		
Anti-Theft Devices			
Driver Assist Sensors			
Fuel Rail			
Heated Seat Elements			
Rain Sensing Wiper System			
,			
Seat Memory Modules Seat Recliner			·
Steering Assist Module			
			•
Vehicle Fluid Coolers Wheel Hub Assembly			•



## And that's not all...

Our Ultimate program offers coverage so comprehensive that if it's not on the short list of Exclusions, it is covered. Ultimate XO coverage includes all components covered under XO-1 and XO-2 coverage PLUS hundreds more.

To view the full list of Exclusions head to our website at www.vprotectcdn.com

