

Additional Benefits

Included with all Xpanded Series Plans

Rental Expense

Reimbursement for substitute transportation in the event of a covered mechanical breakdown.

Trip Interruption Expense

Reimbursement for meals and lodging in the event of a covered mechanical breakdown more than 100 km from home.

Roadside Assistance

Up to \$100 per occurrence for each of the following;

- Towing Assistance
- Flat Tire Assistance
- Fuel, Oil, Fluid and Water Delivery Service
- Lock-Out Assistance
- Battery Assistance
- Collision Assistance

Even more benefits

North American Protection

Xtended Auto covers your vehicle anywhere you go in Canada and the United States.

Coverage That is Simple and Easy to Use

Full coverage with no hidden charges; all parts and labour included. Repair costs are paid directly to the repair facility, saving you out-of-pocket expenses and the inconvenience of waiting for reimbursement.

Transferable Coverage

If you sell your vehicle, you can transfer your Xtended Auto coverage to the new owner, increasing the resale value of your vehicle.

Toll-Free Assistance

Should you need assistance with a claim or have questions about your Xtended Auto coverage, call the toll-free number for assistance.

For more information, please contact:



In British Columbia, Alberta and Saskatchewan:

Underwriter:
Trisura Guarantee Insurance Company
Bay Adelaide Centre
333 Bay Street, Suite 1610, Box 22
Toronto, ON M5H 2R2
Phone: 416-214-2555
Fax: 416-214-9597

In all other provinces:

Insurer:
Trisura Guarantee Insurance Company

Administrator:
CornerStone United, Ltd.
201-931 Commissioners Road E.
London ON N5Z 3H9
Phone: 866-481-1327
Fax: 866-481-1327

Obligor and Administrator:
CornerStone United, Ltd.

The information provided in this brochure is intended to provide only a brief description of the benefits of the Xpanded Series program. The Xpanded Series has exclusions and limitations that apply to the benefits discussed in this brochure. For complete details please see your dealer representative.

XPANDED SERIES



Mechanical Breakdown Coverage



Protect Your Investment
Protect Your Family
Travel With Confidence
The Xtended Auto Advantage



Additional Coverage


OPTIONAL

LUXURY ELECTRONICS PACKAGE

GPS navigation system or other navigational/motorist assistance system; phone system; TV/Video entertainment system (limited to LCD / LED screens of 10" or less); internet access system; heads up display (HUD) projector and display module; audio system amplifier and graphic equalizer. The following parts are specifically excluded: antennae; cables and wiring and remote controls.

ENHANCED SEALS & GASKETS

Seals and gaskets for all covered components are covered independently or in conjunction with a covered repair.

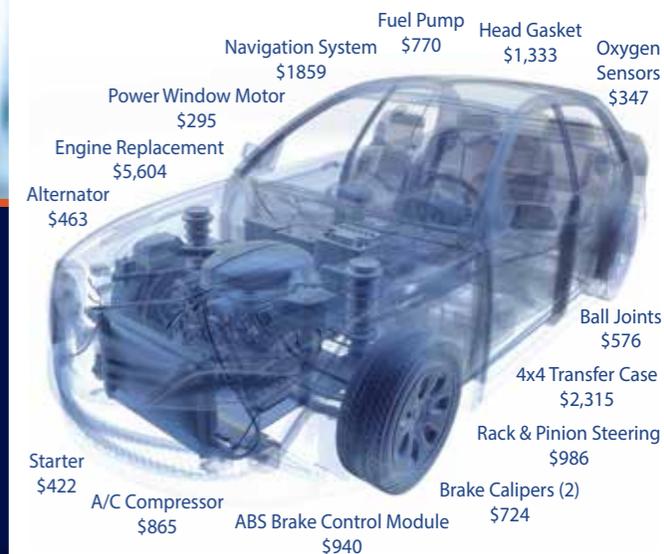

Ultimate XP

Coverage so comprehensive that if it's not on the short list of exclusions*, it is covered.

Ultimate XP coverage includes all components covered under XP1, XP2, XP3 and XP4 coverage PLUS hundreds more, such as;

- Heated seat elements
- Heat control valve
- Driver assist sensors
- DVD player
- Rain sensing wiper system
- Fuel pressure regulator
- Tire pressure sensors
- LED signal mirrors
- Anti-theft devices
- Seat recliners
- Front, rear and side cameras
- Navigation system
- Bluetooth control unit
- Seat memory modules
- Hood and truck lift supports
- Audio system amplifier and graphic equalizer
- Sunroof guides, tracks and cable

**BEST
VALUE**

XP3

Includes all XP-2 components plus the following;

ENHANCED ENGINE Intake manifold(s); exhaust manifold(s); air filter housing; vacuum pump.

ENHANCED STEERING Couplings; steering main and intermediate shafts; power cylinder assembly; power steering cooler; control valve; Pitman arm; idler arm; tie rod ends; drag link/centre link.

ENHANCED ELECTRICAL Engine control module; power seat motors; power seat switch; power window motor; power door lock actuators; power door lock switches; windshield washer pump and switch; distributor; horn(s) and horn button; cruise control engagement switch; power mirror switch.

SUSPENSION Upper and lower control arms, control arm shafts and bushings; upper and lower ball joints; steering knuckles; stabilizer shaft, link and bushings; kingpins and kingpin bushings / bearings.

BRAKES Master cylinder; wheel cylinders; disc brake calipers; metal hydraulic lines and fittings; vacuum assist booster; proportioning valve.

AIR CONDITIONING Compressor; clutch; coil and pulley; condenser; evaporator; accumulator/drier and orifice tubes are only covered in connection with replacement of an above listed component and ONLY if they have failed.

COOLING Fan clutch and fan; electric fan motors; heater control valve.

FUEL DELIVERY Electric and mechanical fuel pumps; fuel pressure regulator; fuel pump driver module; fuel tank sending unit; fuel tank; metal fuel lines.

SEALS AND GASKETS ONLY covered as required in the repair or replacement of a listed component above.

XP4

Includes all XP3 components plus the following;

XPANDED ELECTRICAL Power window regulators and drives; front wiper motor including circuit board, relay and delay switch; manually operated switches for power windows, power seat(s), headlamps, wipers (front and rear), emergency warning flashers, trunk actuator and motor; hybrid power inverter assembly; hybrid system stator and rotor; hybrid system control units and sensors; fuel gauge sending unit; heated back glass elements (glass is not covered); rear wiper motor; heater blower motor; horn; factory installed sun/moon roof motor and its wiring harness and switches; convertible top motor and switches; radio and CD player (factory or dealer installed with factory approved parts only); power antenna motor, mast and switches.

XPANDED SUSPENSION Strut bar and bushings; spindles and spindle supports; Macpherson struts; shackle bushings and eye bushings; springs, torsion bars and bushings; stabilizer linkage and bushings; wheel bearings and seals; automatic leveling unit compressor, sensor and limiter valve.

XPANDED BRAKES Power assist booster and valve; combination valve; backing plates; springs, clips and retainers; self adjusters; rear activators; parking brake linkage and cables.

4-WHEEL STEERING Control unit; actuator; mode selector; position sensor; rear tie rod assembly; rear gear assembly; cylinder barrel; centre joint; pinion; power steering housing is covered if damaged by the failure of an internal part.

XPANDED AIR CONDITIONING Manual switches; expansion valve; dryer tank; accumulator; POA valve; H block; hi / low pressure cut-off switch; ducts and outlet hoses; automatic temperature control unit.

XPANDED COOLING Radiator; thermostat; heater core; hybrid cooling system blower motor and pumps.

XPANDED FUEL DELIVERY Fuel pressure regulator; fuel injectors; fuel distributor; diesel injection pump.

ELECTRONICS Anti-detonation/knock sensor; ESC/EEC module; oxygen sensor; electronic module retard vacuum switch; electronic ignition module; igniter; electronic digital instrument cluster; digital driver information display and module; instrument panel printed circuit board; remote keyless entry transmitter and receiver (loss is not covered); heated side view mirror element; cruise control servo; module and transducer; compass; speed sensor; thermometer.

INTERIOR/EXTERIOR Glove box door and hinge; manually operated seat tracks; adjustable pedals; interior and exterior door handles; door hinges; map/courtesy light assembly; hood, trunk and hatch gas cylinders; hood, trunk and hatch hinges; speedometer head.

SPORT UTILITY Bumper step motor and mounting brackets; power tailgate actuator and motor; power winch motor, its controller and wire harness; power winch roller; spare tire carrier, swing arm, pivots, latches and locks; power running board actuator and motor; swing-out mirror arms, mounts, actuator and motor; pop-out or sliding side/rear window latches and hinges; convenience bed liner; tailgate handle, lock, cables, hinges and latches; edge protectors; cargo lamp; tie downs; trailer hitch receiver, insert and plug receptacle; auxiliary fuel tank and its switch over valve.

ANTI-LOCK BRAKES (ABS) Electronic control unit; anti-lock computer module; wheel speed sensors/exciters; proportioning valves; high pressure hydraulic pump; ABS modulator assembly; accumulator.

EMISSIONS Air fuel ratio sensor; knock sensor; fuel pressure sensor; idle air control valve; intake air temperature sensor; Manifold Air Pressure (MAP) sensor; Mass Air Flow (MAF) sensor; oxygen sensor; Exhaust Gas Recirculation (EGR) valve; Delta Pressure Feedback EGR (DPFE) sensor; Powertrain Control Module (PCM); thermostatically controlled air intake; secondary air injection system; and throttle body assembly.

SEALS AND GASKETS ONLY covered as required in the repair or replacement of a listed component above.

XP2

Includes all XP-1 components plus the following;

TRANSFER UNIT All internal parts; internal gears; shafts; bearings; bushings; input and output shafts; counter shaft; synchronizers and sleeves; springs and viscous couplings. Transfer case is covered if damaged by the failure of an internally lubricated moving part.

DRIVE AXLE All internal parts; axle shafts; axle bearings; drive shafts; U-joints; CV joints; tripod joints; ring and pinion gears; carrier assembly; bearings and shims; centre support bearings; locking hubs; 4-wheel drive actuator. Differential case is covered if damaged by the failure of an internally lubricated moving part.

STEERING Power steering pump; all internal parts in rack and pinion; steering gearbox.

ELECTRICAL Alternator; voltage regulator; starter motor, drive and solenoid; turn signal switch and stop lamp switch.

SEALS AND GASKETS ONLY covered as required in the repair or replacement of a listed component above.

XP1

ENGINE All internally lubricated engine parts including: pistons, piston rings, piston pins, crankshaft, main bearings, thrust bearings/shims, connecting rods, connecting rod bearings, camshaft, camshaft bearings, balance shaft, balance shaft bearings, timing chain or belt, timing gears, tensioners / guides, intake and exhaust valves, valve springs, replaceable valve guides, push rods, rocker arms, rocker arm shafts, cam followers, lash adjusters, lifters, oil pump, oil pump housing, oil pump pressure relief valve and spring; water pump; harmonic balancer; crankshaft pulley; flexplate; valve covers; timing gear cover; oil pan; oil dipstick; engine block and heads are covered if damaged by the failure of an internally lubricated moving part.

DIESEL - diesel injection pump, injectors and vacuum pump.

ROTARY - rotary chamber, rotor and main bearings.

HYBRID/ELECTRIC - Hybrid control unit(s) including inverter; stator and rotor, battery sensors, cooling fan, cooling duct(s), high voltage harness and junction box, electric drive motor(s).

TURBO/SUPERCHARGER All internally lubricated parts including bearings, turbine and turbine shaft; housing is covered if damaged by the failure of an internally lubricated moving part.

TRANSMISSION AUTOMATIC - All internal parts; torque converter; front pump; planetary gear set; direct clutch; forward clutch; low and reverse clutch; clutch apply piston; internal sealing rings; input and output shafts; roller clutches; bands, check balls; band apply servo; drums; centre support; governor assembly; vacuum modulator; valve body; stator and stator shaft; bushings; pressure regulator valve and bearings; pans and cases are covered if damaged by the failure of an internally lubricated moving part.

HYBRID - transaxle assembly, transmission damper assembly, case and all internal parts, transaxle mounts.

MANUAL - internal gears; shafts; bearings; bushings; input and output shafts; counter shaft; synchronizers and sleeves; detent balls; thrust washers; shift forks; levers; collars and springs.

SEALS AND GASKETS ONLY covered as required in the repair or replacement of a listed component above.



*See service contract or mechanical breakdown insurance policy terms and conditions for full details of coverages and exclusions.