



## WHY XTENDED AUTO?

Since 1996 Xtended has been serving Canadian Dealers and their customers. Our programs are Canadian owned and fully underwritten by Trisura Guarantee Insurance Company, an A rated Canadian Insurer. We provide drivers with worry free coverage anywhere they travel throughout North America. One call will get you the support you need.



Mechanical Breakdown Coverage

### Included with all Xtensive Series Plans:

#### Rental Expense

Reimbursement for substitute transportation in the event of a covered mechanical breakdown.

#### Trip Interruption Expense

Reimbursement for meals and lodging in the event of a covered mechanical breakdown more than 100 km from home.

#### Roadside Assistance

Up to \$100 per occurrence for each of the following; Towing Assistance, Flat Tire Assistance, Fuel/Oil/Fluid and Water Delivery Service, Lock-Out Assistance and Battery Assistance.

#### North American Protection

Xtended Auto covers your vehicle anywhere you go in Canada and the United States.

#### Coverage That is Simple and Easy to Use

Full coverage with no hidden charges; all parts and labour included. Repair costs are paid directly to the repair facility, saving you out-of-pocket expenses and the inconvenience of waiting for reimbursement.

#### Transferable Coverage

If you sell your vehicle, you can transfer your Xtended Auto coverage to the new owner, increasing the resale value of your vehicle.

#### Toll-Free Assistance

Should you need assistance with a claim or have questions about your Xtended Auto coverage, call the toll-free number for assistance.



In British Columbia, Alberta and Saskatchewan:

Underwriter:  
Trisura Guarantee Insurance Company  
Bay Adelaide Centre  
333 Bay Street, Suite 1610, Box 22  
Toronto, ON M5H 2R2  
Phone: 416-214-2555  
Fax: 416-214-9597

Administrator:  
CornerStone United, Ltd.  
201-931 Commissioners Road E.  
London ON N5Z 3H9  
Phone: 866-481-1327  
Fax: 866-481-1327

In all other provinces:

Insurer:  
Trisura Guarantee Insurance Company

Obligor and Administrator:  
CornerStone United, Ltd.

The information provided in this brochure is intended to provide only a brief description of the benefits of the Xtensive Series program. The Xtensive Series has exclusions and limitations that apply to the benefits discussed in this brochure. For complete details please see your dealer representative.

Protect your investment  
Protect your family  
Travel with confidence  
*The Xtended Auto Advantage*



### Do you know the average repair cost?

Timing Belt / Timing Chain	\$492	Fuel Injector	\$314	Power Window Motor	\$295	Navigation System	\$1,859	Fuel Pump	\$770
Transmission Replacement	\$2,890	Engine Replacement	\$5,604	Head Gasket	\$1,333	Starter	\$422	Alternator	\$463
Turbocharger/Supercharger	\$2,670	4x4 Transfer Case	\$2,315	A/C Compressor	\$865	ABS Brake Control Module	\$940	DVD Entertainment Systems	\$1,248
Oxygen Sensors	\$347	Bluetooth Handsfree	\$628	Ball Joints	\$576	Brake Calipers (2)	\$724	Rack & Pinion Steering	\$986

For more information visit our website: [www.vprotectcdn.com](http://www.vprotectcdn.com)

## OPTIONAL COVERAGES

### LUXURY ELECTRONICS PACKAGE (included in Ultimate)

GPS navigation system or other navigational / motorist assistance system; Bluetooth control unit, steering wheel switches, microphone; DVD player, front and rear monitor; internet access system; Heads-Up Display (HUD) projector, display module, and control unit; audio system amplifier and graphic equalizer; driver assist sensors including parking / back-up, lane assist, collision avoidance sensors; suspension sensors; seat heater element.

### RENTAL EXPENSE UPGRADE

Increases the maximum rental expense benefit included in the plan.

### CONSEQUENTIAL DAMAGE

In the event a failure occurs to a non-covered part, due to the failure of a covered part, the non covered part will be repaired. In the event a failure occurs to a covered part due to the failure of a non covered part, the covered part will be repaired.

### MOBILITY EQUIPMENT

Chair lift motors and assemblies; electric/hydraulic ramp controls and assemblies; adjustable seating mechanisms; adjustable pedal and steering control mechanisms; hoist and swing arm mechanisms; kneel systems; door opening and closing systems that are a part of the original mobility conversion.

See Inside for Coverage Details



# Coverage options available to meet your needs

COVERED COMPONENTS	XT-1	XT-2	XT-3	ULTIMATE
<b>ENGINE (GAS OR DIESEL)</b>				
All Internally Lubricated Engine Parts	.	.	.	.
Timing Chain or Belt	.	.	.	.
Timing Gears/Tensioners	.	.	.	.
Timing Guides	.	.	.	.
Oil Pump and Oil Pump Housing	.	.	.	.
Intake and Exhaust Manifold	.	.	.	.
Distributor	.	.	.	.
Harmonic Balancer	.	.	.	.
Flexplate	.	.	.	.
Valve Covers	.	.	.	.
Timing Gear Cover	.	.	.	.
Air Filter Housing	.	.	.	.
Water Pump	.	.	.	.
Fuel Pump	.	.	.	.
Vacuum Pump	.	.	.	.
Thermostatically Controlled Air Intake	.	.	.	.
Oil Pan	.	.	.	.
Oil Dipstick	.	.	.	.
Engine Block	.	.	.	.
Cylinder Heads	.	.	.	.
Diesel Injection Pump	.	.	.	.
Diesel Injectors	.	.	.	.
Rotary Chamber	.	.	.	.
Cam Followers	.	.	.	.
Injectors & Vacuum Pump	.	.	.	.
Lash Adjusters	.	.	.	.
Lifters	.	.	.	.
Mounts	.	.	.	.
Oil Pump Pressure Relief Valve & Spring	.	.	.	.
<b>TRANSMISSION:</b>				
All Internal Parts	.	.	.	.
Mounts	.	.	.	.
Pan And Case	.	.	.	.
CVT Belt and Pulleys	.	.	.	.
Dual-Clutch Assembly	.	.	.	.
<b>HYBRID/ELECTRIC VEHICLE:</b>				
Hybrid Control Unit	.	.	.	.
Inverter	.	.	.	.
Stator and Rotor	.	.	.	.
Battery Sensors	.	.	.	.
Cooling Fan	.	.	.	.
Cooling Duct	.	.	.	.
High Voltage Harness	.	.	.	.
Junction Box	.	.	.	.
Electric Drive Motor	.	.	.	.
Drive Battery Pack	.	.	.	.
<b>TURBO/SUPERCHARGER:</b>				
All Internal Parts	.	.	.	.
Housing	.	.	.	.
<b>TRANSFER UNIT (4X4):</b>				
All Internal Parts	.	.	.	.
Transfer Case	.	.	.	.
<b>DRIVE AXLE:</b>				
All Internal Parts	.	.	.	.
"U" Joints	.	.	.	.
Drive Shafts	.	.	.	.
CV / Tripod Joints	.	.	.	.
Differential Case	.	.	.	.
<b>STEERING:</b>				
All Internal Parts in Rack and Pinion	.	.	.	.
Couplings	.	.	.	.
Gear Housing	.	.	.	.
Power Steering Pump	.	.	.	.
Steering Main and Intermediate Shafts	.	.	.	.
Power Cylinder Assembly	.	.	.	.
Power Steering Cooler	.	.	.	.
Control Valve	.	.	.	.
Pitman Arm	.	.	.	.
Idler Arm	.	.	.	.
Tie Rod Ends	.	.	.	.
Drag Link / Centre Link	.	.	.	.
<b>ELECTRICAL:</b>				
Alternator	.	.	.	.
Voltage Regulator	.	.	.	.
Starter Assembly	.	.	.	.
Seat Motors and Switches	.	.	.	.
Door Lock Actuators	.	.	.	.
Window Motors and Switches	.	.	.	.
Power Window Regulators and Drives	.	.	.	.
Trunk Actuator and Motor	.	.	.	.
Front Wiper Motor	.	.	.	.
Horn Button	.	.	.	.
Brake Light Switch	.	.	.	.
Turn Signal Switch	.	.	.	.
Headlamp Switch	.	.	.	.
Wiper Switch	.	.	.	.
Hazard Switch	.	.	.	.
Fuel Sender	.	.	.	.
Heated Back Glass Elements	.	.	.	.
Rear Wiper Motor	.	.	.	.
Heater Blower Motor	.	.	.	.
Horn	.	.	.	.
Sun/Moon Roof Motor and Switches	.	.	.	.
Sun/Moon Roof Wiring Harness	.	.	.	.
Convertible Top Motor and Switches	.	.	.	.
Radio And CD Player	.	.	.	.
Antenna Motor, Mast and Switches	.	.	.	.

COVERED COMPONENTS	XT-1	XT-2	XT-3	ULTIMATE
<b>COOLING:</b>				
Radiator	.	.	.	.
Fan Clutch and Fan	.	.	.	.
Fan Motors	.	.	.	.
Thermostat	.	.	.	.
Heater Core	.	.	.	.
<b>SUSPENSION:</b>				
Upper and Lower Control Arms	.	.	.	.
Control Arm Shafts and Bushings	.	.	.	.
Upper and Lower Ball Joints	.	.	.	.
Steering Knuckles	.	.	.	.
Sway Bar, Links and Bushings	.	.	.	.
King Pins and Bushings	.	.	.	.
Strut Bar and Bushings	.	.	.	.
Spindles and Spindle Supports	.	.	.	.
Macpherson Struts	.	.	.	.
Shackle Bushings and Eye Bushings	.	.	.	.
Springs, Torsion Bars and Bushings	.	.	.	.
Wheel Bearings and Seals	.	.	.	.
Air Suspension Compressor	.	.	.	.
<b>BRAKES:</b>				
Master Cylinder	.	.	.	.
Power Assist Booster and Valve	.	.	.	.
Wheel Cylinders	.	.	.	.
Calipers	.	.	.	.
Combination Valve	.	.	.	.
Metal Lines	.	.	.	.
Backing Plates	.	.	.	.
Vacuum Booster	.	.	.	.
Self-Adjusters	.	.	.	.
Rear Activators	.	.	.	.
Parking Brake Cables	.	.	.	.
<b>AIR CONDITIONING:</b>				
Compressor	.	.	.	.
Clutch	.	.	.	.
Coil And Pulley	.	.	.	.
Orifice Tube	.	.	.	.
Condenser	.	.	.	.
Evaporator	.	.	.	.
Manual Switches	.	.	.	.
Expansion Valve	.	.	.	.
Dryer Tank	.	.	.	.
Accumulator	.	.	.	.
POA Valve	.	.	.	.
Hi / Low Pressure Cut-Off Switch	.	.	.	.
Ducts and Outlet Hoses	.	.	.	.
Automatic Temperature Control Unit	.	.	.	.
<b>ELECTRONICS:</b>				
Electronic Spark Control Module	.	.	.	.
Electronic Engine Control Module	.	.	.	.
Engine Control Module	.	.	.	.
Retard Vacuum Switch	.	.	.	.
Ignition Module	.	.	.	.
Fuel Pump Driver Module	.	.	.	.
Igniter	.	.	.	.
Digital Instrument Cluster	.	.	.	.
Digital Driver Information Display	.	.	.	.
Digital Driver Information Module	.	.	.	.
Front, Rear, and Side View Camera	.	.	.	.
Front, Rear, and Side View Display Monitor	.	.	.	.
Instrument Panel	.	.	.	.
Throttle Position Sensor	.	.	.	.
Throttle Actuator	.	.	.	.
Camshaft Position Sensor	.	.	.	.
Crankshaft Position Sensor	.	.	.	.
Transmission / Transaxle Sensors	.	.	.	.
Sensors and Initiators for TPMS	.	.	.	.
Control Module for TPMS	.	.	.	.
Powertrain Control Module	.	.	.	.
Transmission Control Module	.	.	.	.
Keyless Entry Transmitter and Receiver	.	.	.	.
Heated Mirror Element	.	.	.	.
Cruise Control Module	.	.	.	.
Compass	.	.	.	.
Vehicle Speed Sensor	.	.	.	.
Thermometer	.	.	.	.
<b>EMISSIONS:</b>				
Knock Sensor	.	.	.	.
Oxygen Sensor	.	.	.	.
Engine Air Intake Temperature Sensor	.	.	.	.
Manifold Air Pressure Sensor	.	.	.	.
Mass Air Flow Sensor	.	.	.	.
Exhaust Gas Recirculation Valve	.	.	.	.
Delta Pressure Feedback EGR Sensor	.	.	.	.
Fuel Pressure Sensor	.	.	.	.
Idle Air Control Valve	.	.	.	.
Secondary Air Injection System	.	.	.	.
Throttle Body Assembly	.	.	.	.
<b>SPORT UTILITY:</b>				
Step Bumpers	.	.	.	.
Tailgate Actuator and Motor	.	.	.	.
Winch Motor Controller and Wire Harness	.	.	.	.
Spare Tire Carrier	.	.	.	.
Running Board Actuator and Motor	.	.	.	.
Swing Out Mirror Arms, Actuator and Motor	.	.	.	.
Tailgate Handle	.	.	.	.
Cargo Lamp	.	.	.	.
Trailer Hitch Receiver	.	.	.	.

COVERED COMPONENTS	XT-1	XT-2	XT-3	ULTIMATE
<b>SPORT UTILITY CONTINUED</b>				
Auxiliary Fuel Tank	.	.	.	.
Auxiliary Fuel Tank Switch	.	.	.	.
<b>FUEL DELIVERY:</b>				
Fuel Injectors and Fuel Distributor	.	.	.	.
Fuel Tank	.	.	.	.
Metal Fuel Lines	.	.	.	.
<b>4-WHEEL STEERING:</b>				
Control Unit	.	.	.	.
Actuator	.	.	.	.
Mode Selector	.	.	.	.
Position Sensor	.	.	.	.
Rear Tie Rod Assembly	.	.	.	.
Rear Gear Assembly	.	.	.	.
Cylinder Barrel	.	.	.	.
Centre Joint	.	.	.	.
Pinion	.	.	.	.
Power Steering Housing	.	.	.	.
<b>ANTI-LOCK BRAKES (ABS)</b>				
Electronic Control Unit	.	.	.	.
Wheel Speed Sensors / Exciters	.	.	.	.
Proportioning Valves	.	.	.	.
ABS Modulator Assembly	.	.	.	.
Accumulator	.	.	.	.
<b>INTERIOR/EXTERIOR:</b>				
Glove Box Door and Hinge	.	.	.	.
Manually Operated Seat Tracks	.	.	.	.
Adjustable Pedals	.	.	.	.
Door Handles and Door Hinges	.	.	.	.
Map / Courtesy Light Assembly	.	.	.	.
Hood, Trunk and Hatch Gas Cylinders	.	.	.	.
Hood, Trunk and Hatch Hinges	.	.	.	.
Bumper Energy Absorbers	.	.	.	.
Speedometer Head	.	.	.	.
<b>ADDITIONAL COVERAGE</b>				
Wheel Hub Assembly	.	.	.	.
Vehicle Fluid Coolers	.	.	.	.
Heated Seat Elements	.	.	.	.
Rain Sensing Wiper System	.	.	.	.
Driver Assist Sensors	.	.	.	.
Seat Memory Modules	.	.	.	.
Seat Recliner	.	.	.	.
Fuel Rail	.	.	.	.
Air Door Motors	.	.	.	.
Anti-Theft Devices	.	.	.	.
Tire Pressure Sensors	.	.	.	.
Hood and Truck Lift Supports	.	.	.	.
Audio System Amplifier	.	.	.	.
Audio System Graphic Equalizer	.	.	.	.
DVD Player	.	.	.	.
LED Signal Mirrors	.	.	.	.
Navigation System	.	.	.	.
Bluetooth Control Unit	.	.	.	.
Sunroof Guides, Tracks and Cable	.	.	.	.
Heat Control Valve	.	.	.	.
Fuel Pressure Regulator	.	.	.	.
Steering Assist Module	.	.	.	.
Plus Hundreds More...	.	.	.	.
<b>SEALS AND GASKETS:</b>				
For the Above Listed Assemblies	.	.	.	.

*And that's not all...*

*Our Ultimate program offers coverage so comprehensive that if it's not on the short list of Exclusions, it is covered. Ultimate XT coverage includes all components covered under XT-1, XT-2 and XT-3 coverage PLUS hundreds more.*

*The full list of Exclusions can be found on our website at [www.vprotectcdn.com](http://www.vprotectcdn.com).*



*The information provided is intended to provide only a brief description of the benefits of the Xtended Auto program. The Xtended Auto program has exclusions and limitations that apply to the benefits discussed. For complete details please see service contract or mechanical breakdown insurance policy terms and conditions. Repair costs are estimates and may vary depending on unit and repair facility.*